

KEY FEATURES

- Side control panel operation
- Instant ceramic heating system for unlimited warm rear and front cleansing
- Water and seat temperature settings
- Water pressure controls
- Aerated wash spray with 3 width adjustments
- Intelligent body sensor


- Antibacterial, soft-closing "Quick Release" elongated seat for easy removal and cleaning
- Self-cleaning antibacterial spray nozzle
- Soft night light
- Automatic power-saving mode
- Low temperature scald protection
- 1-Year limited warranty






SPECIFICATIONS


Model Number	BTS-1005E-W
Seat Temperature	Adjustable (4 Levels) 104°F (Max.)
Water Temperature	Adjustable (4 Levels) 104°F (Max.)
Warm Air Temperature	Adjustable (4 Levels) 131°F (Max.)
Power Cord Length	3.8 Feet (including plug)
Rated Power Consumption	1140W
Voltage / Frequency	110V / 60Hz
Water Pressure	11.6 psi - 101.5 psi
Dimensions	17¾"W x 20%"L x 5%"H

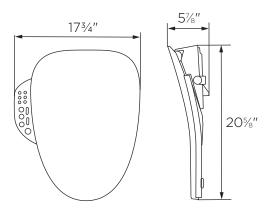





FOREMOST. INTELLIGENT BIDET SEAT

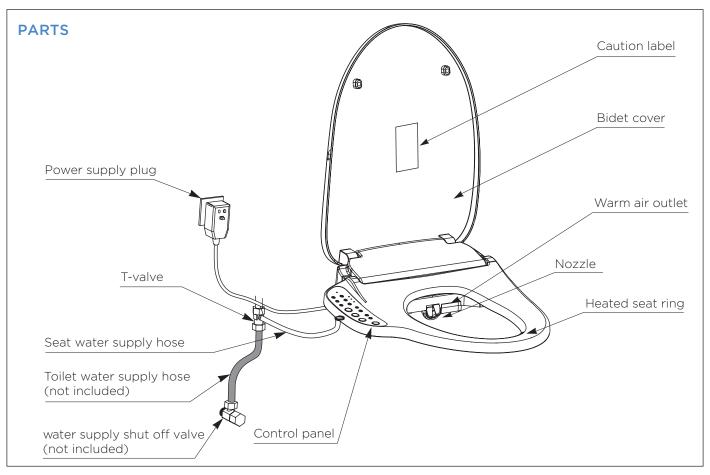

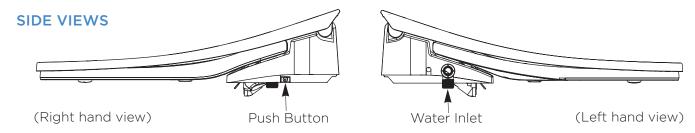

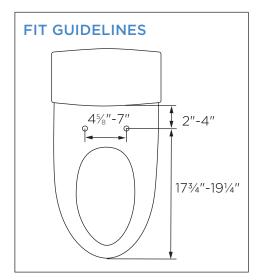

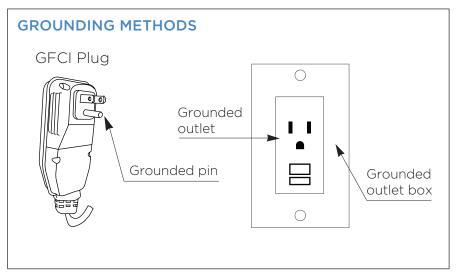

OPERATION & FUNCTIONS

The Smart toilet seat automatically turns on when it senses body weight being applied to the seat ring. The wash functions and warm air function will not work unless the body sensor on the seat ring detects body weight.

ON/OFF STOP



 Stops all washing and drying function currently running.

POSTERIOR



- The water is sprayed from the nozzle to wash the posterior area.
- Pressing the button again will change the mode into oscillating cleaning and expand the spray range.

FEMININE



- The water is sprayed from the nozzle to wash the feminine area.
- Pressing the button again will change the mode into oscillating cleaning and expand the spray range.

DRY



- Press to dry the front and rear
- Switch the display of [LOW], [MED], [HIGH], [OFF].
- Stops automatically after 4 minutes.

WASH/DRY



- Press to start the posterior wash for 90 seconds, then dry for 4 minutes.
- If pressed again during 90 seconds, it will skip to drying function.

LIGHTING



• Turn the night light on/off.

MASSAGE



- While washing, press the button to start the cycle of cold and warm water.
- Only available when the "POSTERIOR" or "FEMININE" wash function has started.
- Press again to stop the massage.

FEMININE WATE POSTERIOR UV STERII IZATION \triangleleft + NOZZLE POSITION н О \bigcirc \bigcirc L SPRAY INTENSITY ON/OFF **STOP**

SPRAY INTENSITY (+



- Adjusts water pressure.
- To Activate: Press "+" or "-" to increase or decrease water pressure.

(NOZZLE POSITION)



• Nozzle position can move back and forth by 5 gears

WATER TEMP.



- Shows the current temperature when pressed once.
- Press again to change the temperature.
- Default temperature is MEDIUM.
- Switch the display to [LOW], [MED], [HIGH], [OFF].

SEAT TEMP.



- Shows the current temperature when pressed once.
- Press again to change the temperature.
- Switch the display to [LOW], [MED], [HIGH], [OFF].
- Default temperature is MEDIUM.

DRY TEMP.



- Shows the current temperature when pressed once.
- Press again to change the temperature.
- Default temperature is MEDIUM.
- Switch the display to [LOW], [MED], [HIGH], [OFF].

(UV STERILIZATION) •



- The UV sterilizing lamp cannot be controlled.
- Automatically runs 20 seconds after the cleaning, and turns off after 3 minutes or when the cleaning function is used again.